




Service instruction for the 3-cup rotor Wind sensor 879.3

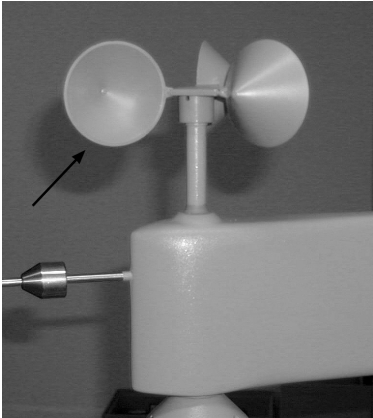


Replacement of the defective 3-cup rotor.



Remove the sealing wax in the bolt hole of the defective 3-cup rotor.

Dismount the defective 3-cup rotor.

Use a 1/16" Allen key.

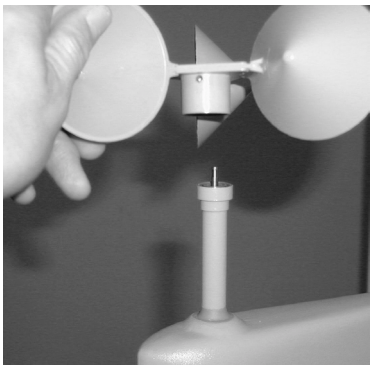


Mount the new 3-cup rotor.

Check that it has been pressed completely in position.

Tighten the securing bolt.

The bolt hole is sealed with wax or grease.

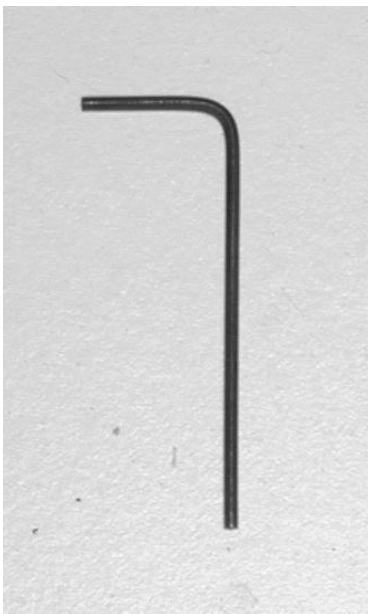

Necessary tool:
1,6 mm Allen key (1/16 inch)