



Replacement instruction POWER SUPPLY MODULE , PSM-1

Before replacing the modules take following action:

DIP switches:

No dip switch settings or any other settings.

Handle:

Disconnect supply before removing the module from the rack.