


**Replacement instruction – CONTROL PANEL, CP-1**

Placement of I/O addr./jumpers CP-1 DELOMATIC

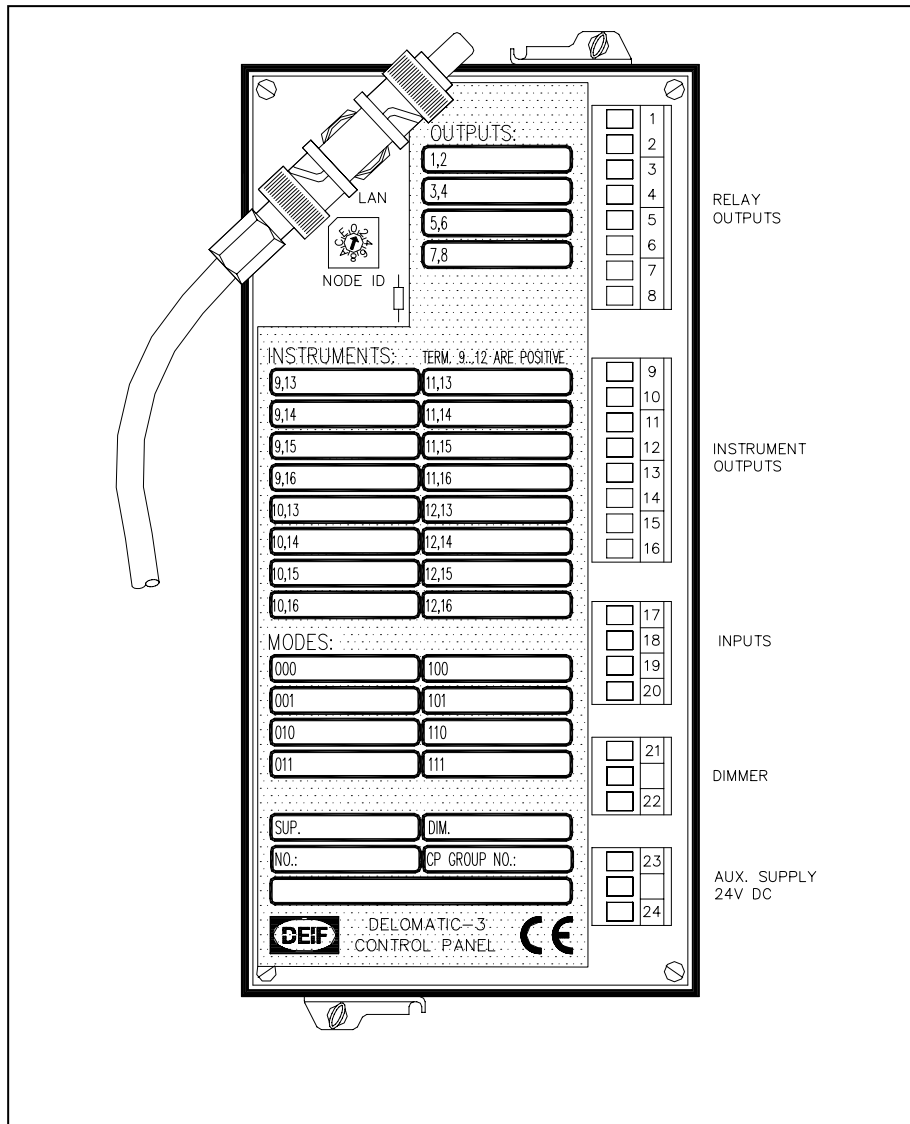


**DIP switches:**



The I/O address (= ID no.) for the CP module must always be the same as the corresponding DGU's number (CM node ID).  
 The I/O address reflects the ARC-network node ID.

The CP group number is normally set to 1 on delivery (no jumper). To change the CP group number the CP must be opened and the jumper X200 located.

Figure 1. Jumper setting for group no. 2:

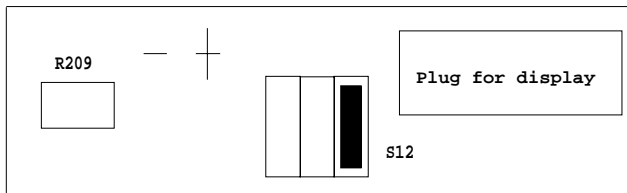

Jumper setting for group no. 3:

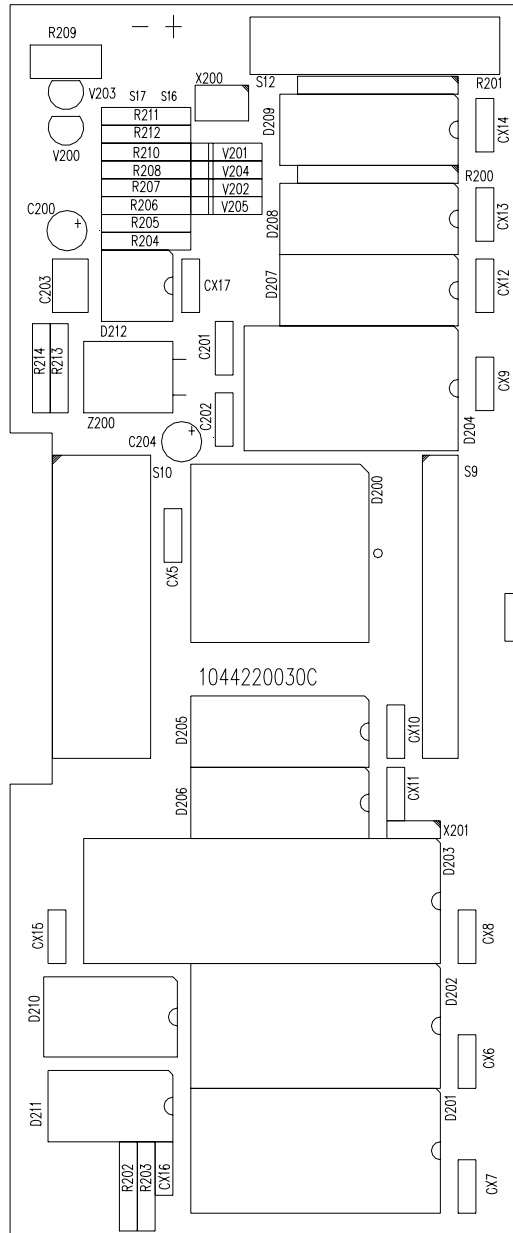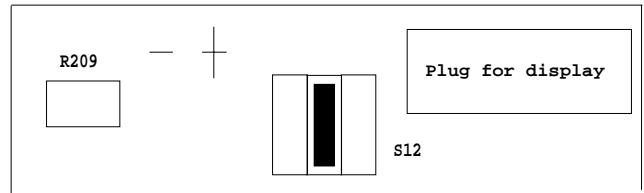

**Handle:**

For replacement, please notice that the replacement unit is given the same I/O address and CP group number as the unit to be replaced.