





-power in control

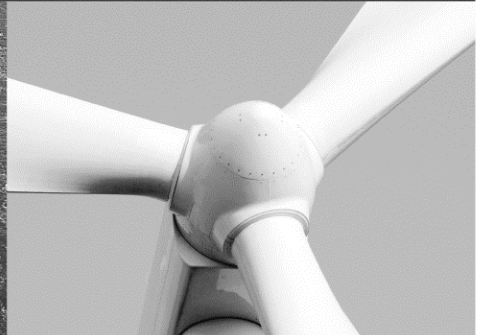

## Delomatic 4 DM-4 Land/DM-4 Marine

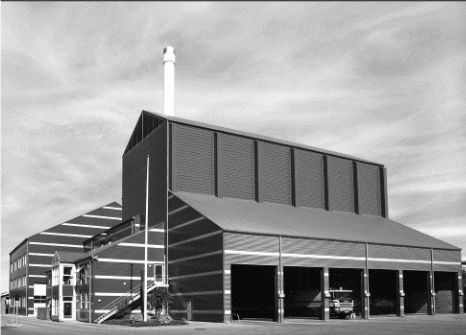

## Replacement Instructions AOP-1



DEIF A/S · Frisenborgvej 33 · DK-7800 Skive  
Tel.: +45 9614 9614 · Fax: +45 9614 9615  
info@deif.com · www.deif.com

Document no.: 4189340464B

Table of contents

**1. REPLACEMENT OF THE ADDITIONAL OPERATOR PANEL 1 (AOP-1) ..... 3**  
    GENERAL INSTRUCTION ..... 3  
    REPLACEMENT OF MODULE ..... 3

## 1. Replacement of the Additional Operator Panel 1 (AOP-1)

---

### General instruction

Before replacing any modules, please refer to the General Instruction for replacement of Delomatic 4 modules.



#### Be aware of static electricity when handling!

- Please do not switch over modules from one DGU to another before consulting the documentation provided by DEIF A/S, and preferably consulting DEIF A/S.
- Please let us know if you do switch modules permanently, this will help us keep our records updated. Call us or send a fax to DEIF A/S, for the attention of the service department:

Tel.: + 45 9614 9614      Fax: +45 9614 9615

- When modules are replaced due to updating or due to any malfunctions, please let us know the exact location of new modules.

### Replacement of module

- Switch all equipment into switchboard control
- Remove the power supply from the defective DGU
- Remove other connections/plugs on the AOP-1
- Take out the text labels from the defective AOP-1 and insert these into the pockets on the new AOP-1
- Connect the plugs and power supply again
- Make a test to ensure that the system works as predetermined

DEIF A/S reserves the right to change any of the above.