



- power in control



## MULTI-LINE 2 DESCRIPTION OF OPTIONS



### Option A4

#### Loss of mains protection package

- Description of option
- Functional description
- Response time



DEIF A/S · Frisenborgvej 33 · DK-7800 Skive  
Tel.: +45 9614 9614 · Fax: +45 9614 9615  
info@deif.com · www.deif.com

Document no.: 4189340691B  
SW version:

<b>1. Delimitation</b>	
1.1. Scope of option A4.....	3
<b>2. General information</b>	
2.1. Warnings, legal information and safety.....	4
2.1.1. Warnings and notes .....	4
2.1.2. Legal information and disclaimer .....	4
2.1.3. Safety issues .....	4
2.1.4. Electrostatic discharge awareness .....	4
2.1.5. Factory settings .....	5
<b>3. Description of option</b>	
3.1. Option A4.....	6
3.2. ANSI numbers.....	6
<b>4. Functional description</b>	
4.1. Voltage vector system.....	7
4.2. Positive sequence voltage.....	7
<b>5. Parameters</b>	
5.1. Further information.....	8
<b>6. Response time</b>	

# 1. Delimitation

## 1.1 Scope of option A4

This description of options covers the following products:

AGC-3	SW version 3.4x.x or later
AGC-4	SW version 4.0x.x or later
AGC 200 series	SW version 3.5x.x or later
APU 200 series	SW version 3.53.x or later
GPC/GPU Hydro	SW version 3.0x.x or later
GPU/PPU	SW version 3.0x.x or later

## 2. General information

### 2.1 Warnings, legal information and safety

#### 2.1.1 Warnings and notes

Throughout this document, a number of warnings and notes with helpful user information will be presented. To ensure that these are noticed, they will be highlighted as follows in order to separate them from the general text.

##### Warnings



**Warnings indicate a potentially dangerous situation, which could result in death, personal injury or damaged equipment, if certain guidelines are not followed.**

##### Notes



**Notes provide general information, which will be helpful for the reader to bear in mind.**

#### 2.1.2 Legal information and disclaimer

DEIF takes no responsibility for installation or operation of the generator set. If there is any doubt about how to install or operate the engine/generator controlled by the Multi-line 2 unit, the company responsible for the installation or the operation of the set must be contacted.



**The Multi-line 2 unit is not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.**

##### Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

#### 2.1.3 Safety issues

Installing and operating the Multi-line 2 unit may imply work with dangerous currents and voltages. Therefore, the installation should only be carried out by authorised personnel who understand the risks involved in working with live electrical equipment.



**Be aware of the hazardous live currents and voltages. Do not touch any AC measurement inputs as this could lead to injury or death.**

#### 2.1.4 Electrostatic discharge awareness

Sufficient care must be taken to protect the terminals against static discharges during the installation. Once the unit is installed and connected, these precautions are no longer necessary.

### **2.1.5 Factory settings**

The Multi-line 2 unit is delivered from factory with certain factory settings. These are based on average values and are not necessarily the correct settings for matching the engine/generator set in question. Precautions must be taken to check the settings before running the engine/generator set.

## 3. Description of option

### 3.1 Option A4

Option A4 is a software option and therefore not related to any hardware apart from the standard installed hardware.

This protection prevents motor malfunctioning due to insufficient or unbalanced supply voltage. The protection is used when the generator is running in parallel with the mains.

### 3.2 ANSI numbers

Protection	ANSI no.
Positive sequence voltage	47 U1, 27 pos


## 4. Functional description

### 4.1 Voltage vector system

The measurements of the busbar/mains voltages are split up in three theoretical systems:

- The positive sequence system with a positive direction of rotation
- The negative sequence system with a negative direction of rotation
- The zero sequence system with a positive direction of rotation

As a result of the generator's power production to the consumers, the positive sequence system represents the fault-free part of the voltages and currents. The negative sequence system, which rotates in the opposite direction of the generator, is used by the protection's negative sequence current and negative sequence voltage to prevent the generator from overheating. The zero sequence system is used for detection of earth faults.

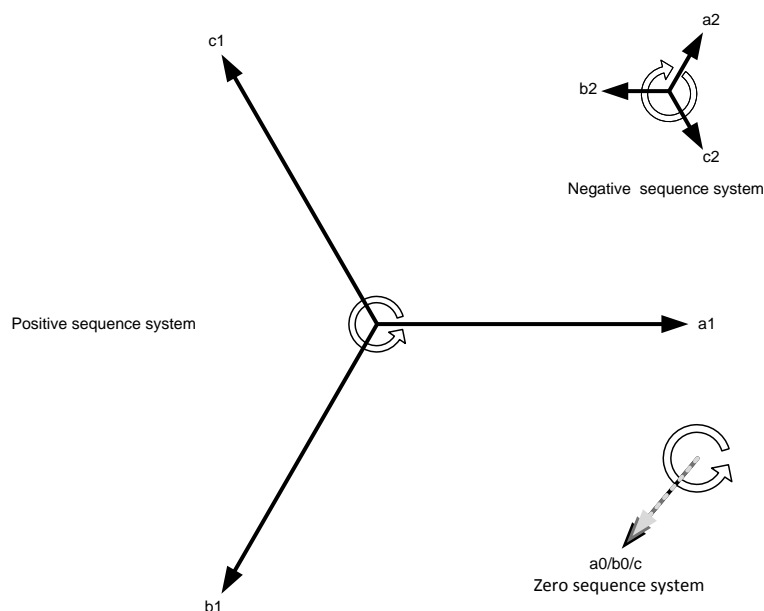

#### Description of the approach

Positive, negative and zero sequence values are calculated based on estimated phase current/phase voltage phasors. The RMS value of the phase quantity expresses the absolute value of the phasors, and an evaluation of zero crossings delivers expressions for the angles between the phasors.

### 4.2 Positive sequence voltage

The positive sequence voltage detects voltage state on the positive sequence voltage part of the 3-phase voltage vector diagram of the busbar/mains.

The positive sequence voltage low calculation takes place in the zero crossing of all three phases to make the protection as fast as possible.

## 5. Parameters

### 5.1 Further information

The option A4 relates to the parameter 1440.

For further information, please see the separate parameter list for the Multi-line unit in question:

AGC-3	Document number 4189340705
AGC-4	Document number 4189340688
AGC 200	Document number 4189340605
GPC-3/GPU-3 Hydro	Document number 4189340580
GPU-3/PPU-3	Document number 4189340581




## 6. Response time

The time delay for the positive sequence alarm can be adjusted. It is adjusted in periods, not seconds.

The response times specified below are measured with a 2-period delay.

Delay:	Response time	Recommended protection for fast trip	Remarks
<b>Fault:</b>			
3-phase fault	<50 ms	BB pos seq volt	
1 phase missing	<70 ms	BB U<	Option A
2 phases missing	<110 ms	BB U<	Option A
3 phases missing	<285 ms	df/dt or vector jump	Option A

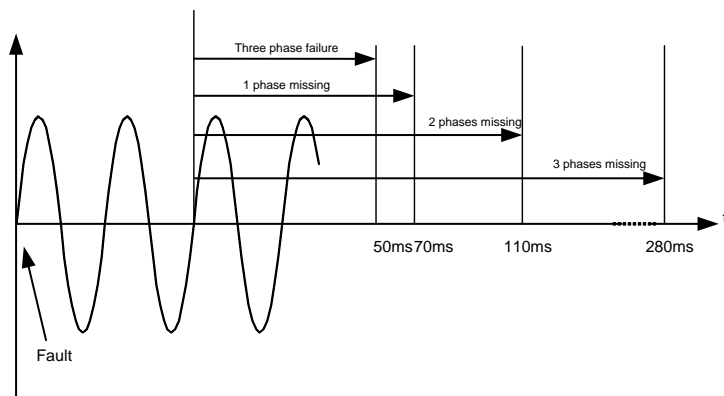

The diagram shows that when the fault has been present for two periods, the relay will trip within the specified time.



**Response time is with 2 periods delay setting. The response time counts from the end of the delay.**